

SNOWDOG®

PARTS LIST


STANDARD B13 ME (S-B13ME-WR)

BM500STANDJB008196-008210



Frame


Scheme

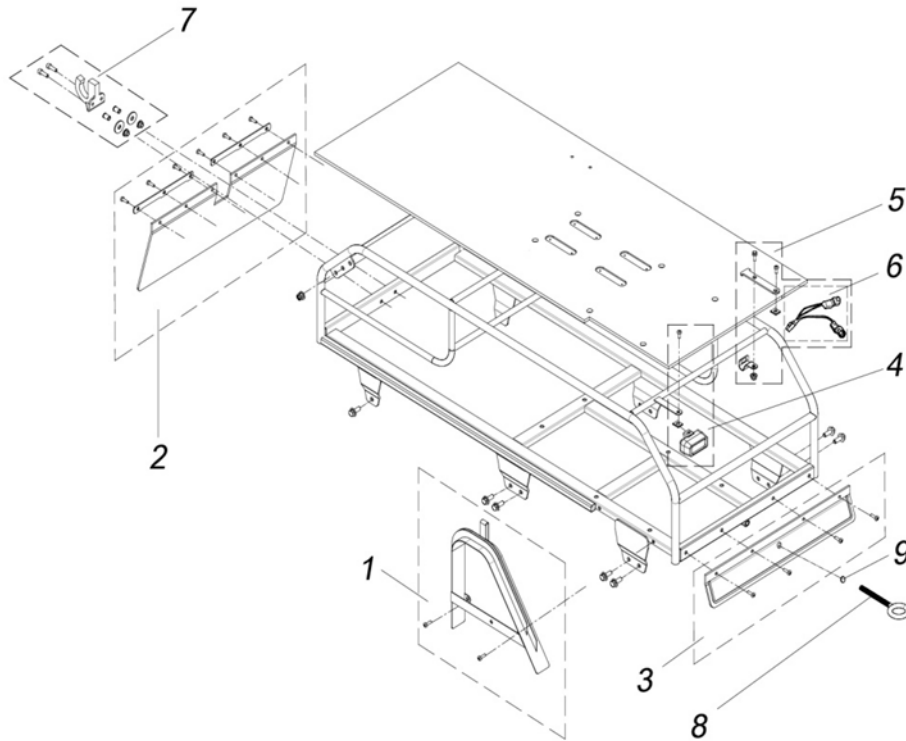

#	Part number	Description	Qty in kit
1	4067-9901-0000	CHAIN PROTECTION KIT FOR BRIGGS AND STRATTON 13 ENGINES (2017)	
		chain protection	1
		screw M6×16	2
		rivet nut M6	
2	4177-9901-0000	REAR MUD FLAPS KIT 560MM 2017	
		mud flap	1
		screw M6×16	6
		metal plate	2
3	4060-0003-0000	FRONT MUD FLAPS KIT 560MM	
		mud flap	1
		screw M6×16	6
4	4060-0031-0000	FRONT LIGHT (LED) KIT	
		front light	1
		screw M6×12	1
		M6 nut (clip)(green)	1


Frame

Scheme

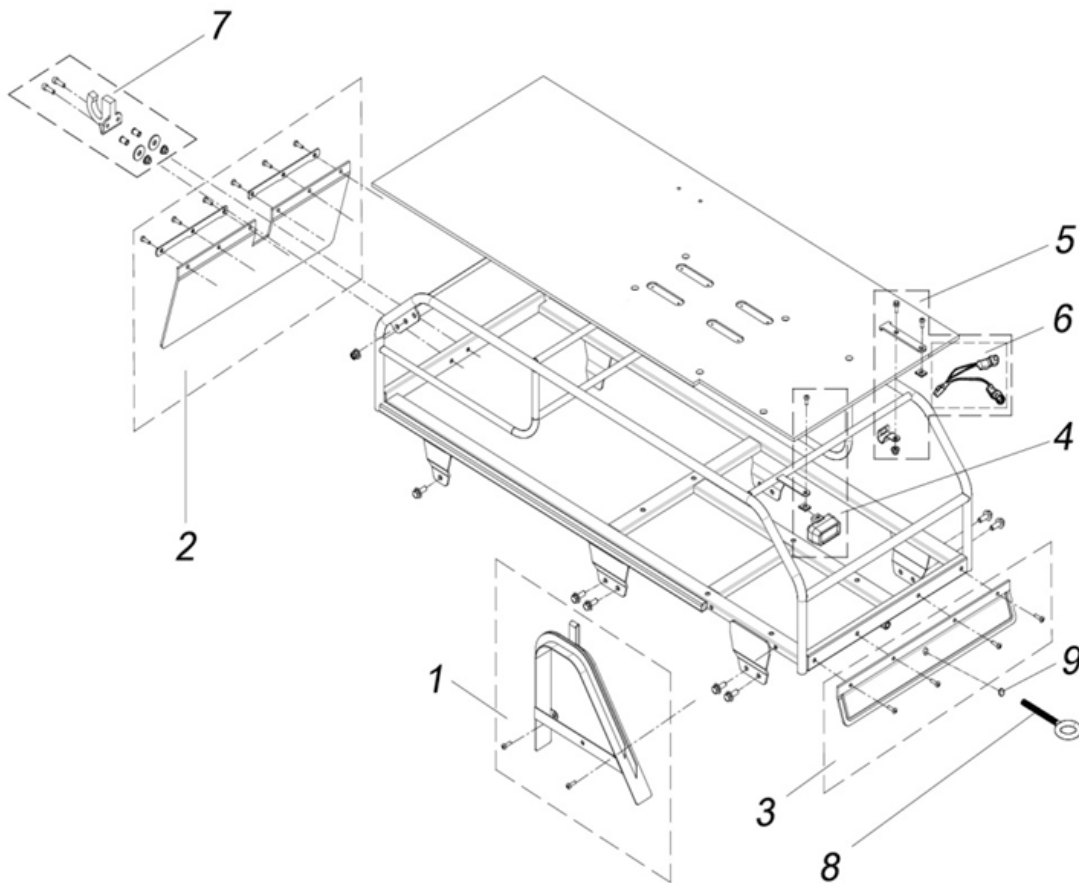


#	Part number	Description	Qty in kit
5	4980-9900-0000 (SUBSTITUTE PART)	HEADLIGHT BRACKET KIT (2018)	
		bracket	1
		clamp	1
		screw M6×16	1
		nut M6	1
		Headlight Y-connector	1
6	4980-4900-0001 (SUBSTITUTE PART)	HEADLIGHT Y-CONNECTOR	1
7	4060-0030-0000	TOW HITCH MOUNT KIT	
		tow hitch	1
		screw M8×40	2
		nut M8	2
		rivet nut M8	2
		washer 8×24	2
8	4060-0050-0000	FRONT EYEBOLT	1
9	4060-0051-0000	MUD FLAPS CAP	1

Chassis

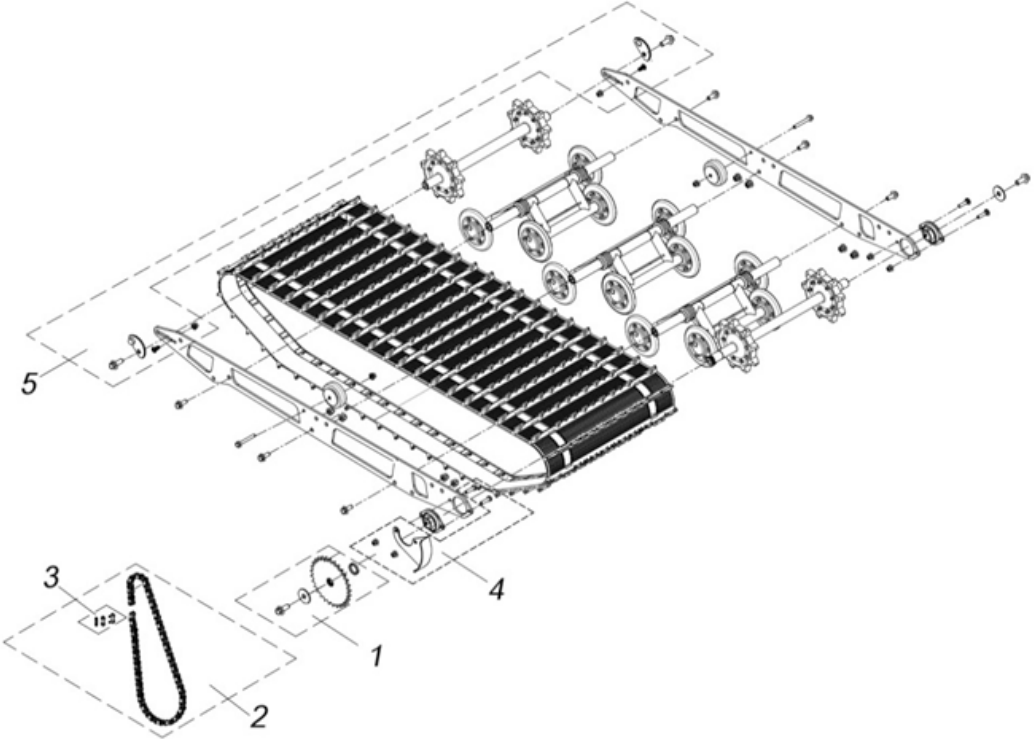Scheme	#	Part number	Description	Qty in kit
	1	4477-9900-0000	29 TEETH SPROCKET KIT	
			sprocket (29 teeth)	1
			screw M12×30	1
			washer 12×44	1
			bush 10 mm	1
		4060-0014-0000 (SUBSTITUTE PART)	32 TEETH SPROCKET KIT	
			sprocket (32 teeth)	1
			screw M12×30	1
			washer 12×44	1
			bush 10 mm	1
	2	4470-9901-0000	STANDARD MODEL CHAIN (60 LINKS. WITHOUT LOCK)	1
		4460-0001-0000 (SUBSTITUTE PART)	STANDARD MODEL CHAIN KIT (62 LINKS WITH LOCK)	1
	3	4470-0004-0000 (SUBSTITUTE PART)	CHAIN LOCK	1
	4	4177-9900-0001 (SUBSTITUTE PART)	DRIVECHAIN SPROCKET GUARD RIGHT	
			guard	1
			screw M8×30	2
			nut M8	2
	5	4060-0036-0000	ECCENTRIC PLATES KIT	
			right eccentric plate	1
			left eccentric plate	1
			screw M8×15-10×15	2
			nut M8	2
			screw M12×30	2


Chassis

Scheme

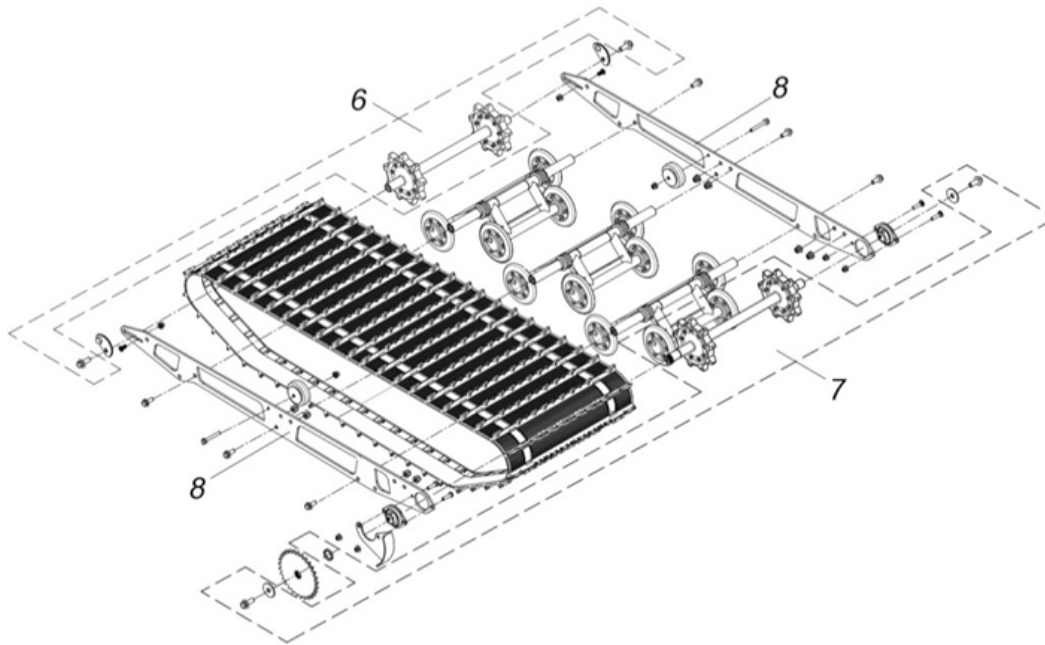


#	Part number	Description	Qty in kit
6	4060-0007-0000	TRANSMISSION DRIVEN SHAFT KIT (FOR WR MODELS)	
		transmission driven shaft	1
		screw M12×30	2
7	4060-0008-0000	TRANSMISSION DRIVER SHAFT KIT (FOR WR MODELS)	
		transmission driver shaft	1
		screw M12×30	2
		washer 12×44	2
		bush 10 mm	1

Chassis

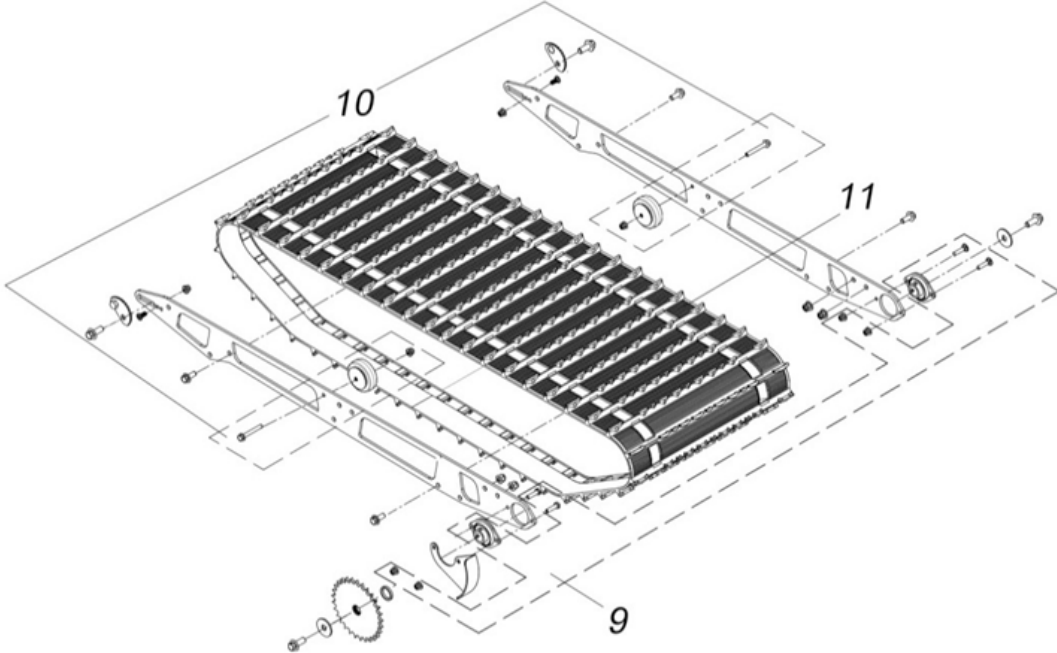Scheme	#	Part number	Description	Qty in kit
	8	4567-2020-0290	UNDERCARRIAGE PLATE (STANDARD W2)	1
	9	4060-0022-0000	BALL BEARING (WITH BODY PARTS) KIT	
			ball bearing	2
			screw M8×20	4
			nut M8	4

Chassis

Scheme

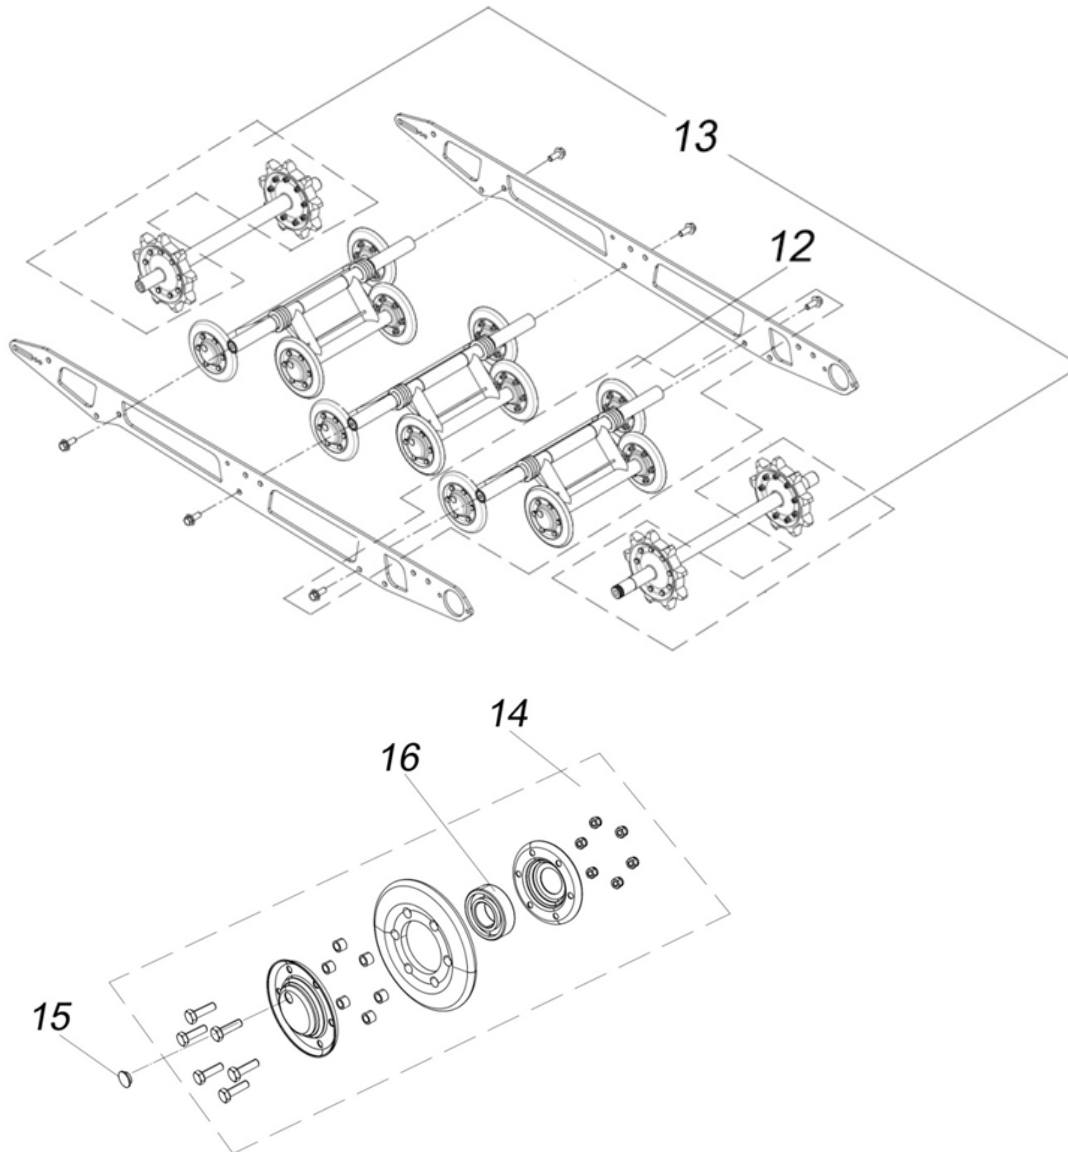


#	Part number	Description	Qty in kit
10	4060-0015-0000	SUPPORT TRACKS WHEELS KIT	
		wheel	2
		screw M8×60	2
		nut M8	2
11	4567-0001-0000	TRACK (FOR STANDARD)	1
12	4060-0029-0000	THREE SPRINGS TROLLEY KIT (488MM)	
		trolley 488 mm	1
		screw M10×30	2
13	4573-9900-0000	PLASTIC SPROCKET KIT	
		sprocket	2
		screw M6×20	18
		nut M6	18
		bush	18
14	4577-9900-0000	TROLLEY WHEEL	
		screw M6×20	6
		bush	6
		nut M6	6
		tire	1
		inner cover	1
		outer cover	1
15	4470-9900-0001	CAPS FOR WHEELS KIT	
		cap	20
16	4588-9904-0000	TROLLEY WHEELS BEARING KIT	
		ball bearing	4

Transmission

Scheme	#	Part number	Description	Qty in kit
	1	4478-9900-0000	DRIVER PULLEY FOR BRIGGS AND STRATTON 13 ENGINES (SHAFT 25 MM)	
			Driver pulley	1
			Bolt M8×140	1
			washer 8×40×3	1
	2	4060-0035-0000	DRIVEN PULLEY KIT FOR BRIGGS AND STRATTON 13 ENGINES	
			CVT insert	3
			Fixed part of the driven pulley	1
			The mobile part of the driven pulley	1
			coupling	1
			washer 25×44×4	1
			adjusting washer 25×44×1	1
			spring	1
			screw M10×30	1
			washer 10×34	1
			key	2
	3	4467-0127-0000	CVT 30×14×1120 BELT FOR BRIGGS AND STRATTON 13 ENGINES	1

Transmission


Scheme

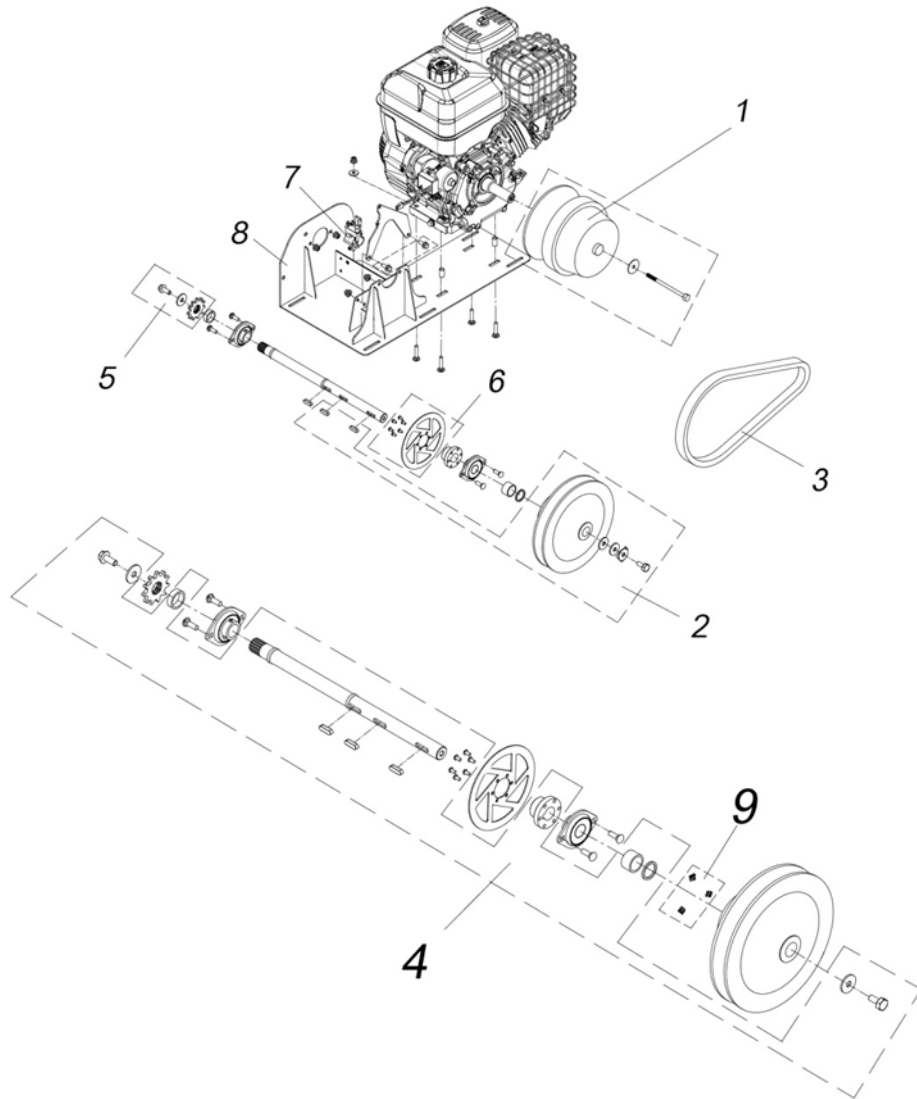

#	Part number	Description	Qty in kit
4	4470-0003-0000	CVT SHAFT KIT (SAFARI WITHOUT REVERSE GEAR) (ENGINE SHAFT 25 MM)	1
		driven shaft CVT	1
		screw M10×30	2
		washer 10×34	2
		key	3
		bush 20 mm	1
		bush 3 mm	1
		bush 10 mm	1
		flange parking brake	1
		screw M5×8	6
		CVT insert	3
5	4060-0013-0000	TEETH SPROCKET KIT (11 TEETH)	
		sprocket (11 teeth)	1
		screw M10×30	1
6	4060-0011-0000	PARKING BRAKE DISC KIT	
		parking brake disc	1
		screw M5×8	6
7	4667-2021-0000	PARKING CALIPER ASSY	1
8	4477-0100-1100	ENGINE BRACKET (BS WR)	1
9	4060-0010-0000	SAFARI CVT INSERTS SET (3 PCS)	
		CVT insert	3

Battery


Scheme

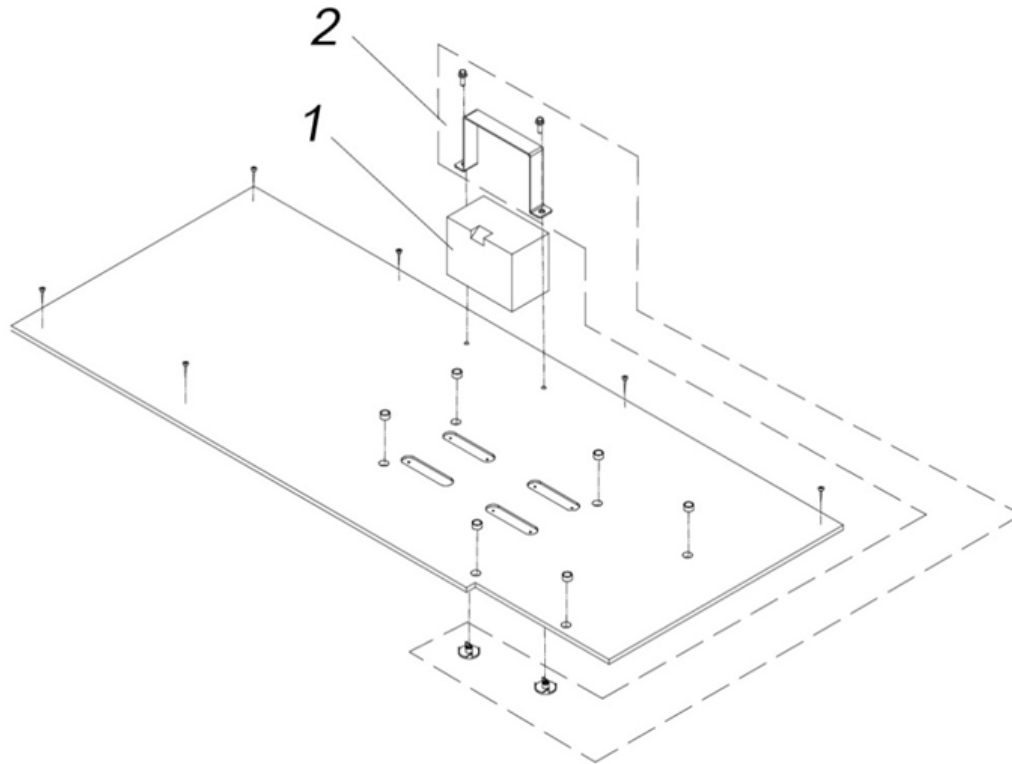

#	Part number	Description	Qty in kit
1	4377-9900-0000	BATTERY 12V 11.2 Ah	1
2	4377-9900-1000	BATTERY BRACKET KIT (FOR BATTERY 11.2 AH)	
		nut M6×12	2
		screw M6×16	2
		bracket	1

Handlebar


Scheme

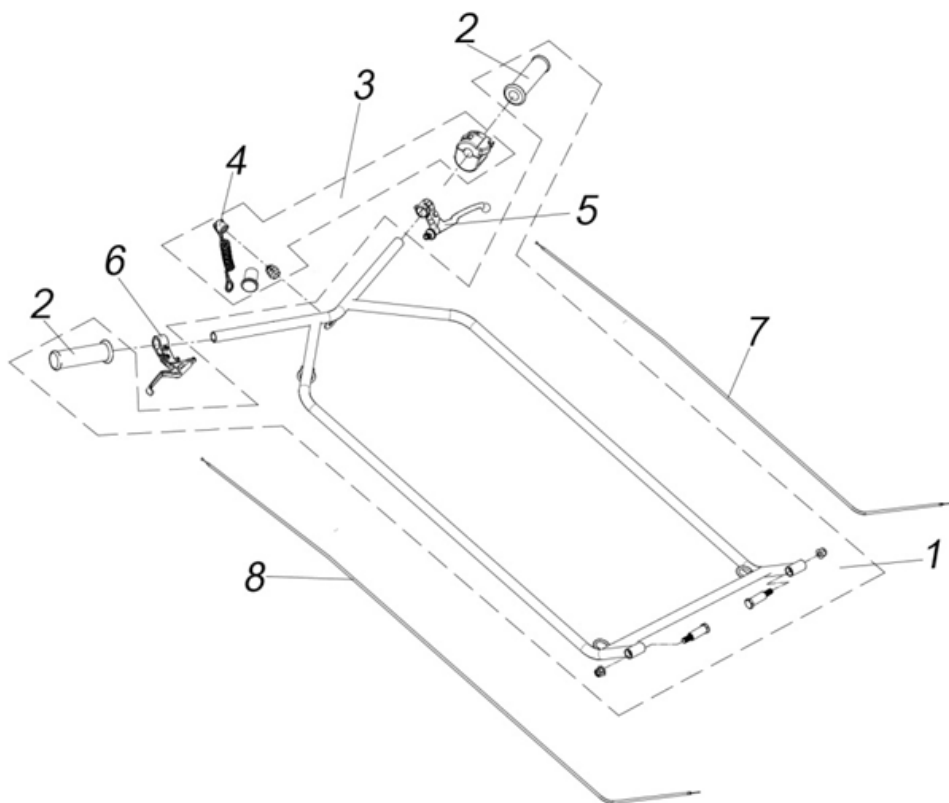

#	Part number	Description	Qty in kit
1	4060-0026-0000	HANDLEBAR KIT (STANDARD WR AND WL)	
		handlebar	1
		handgrip	2
		screw M10×15-15×40	2
		nut M10×1.5	2
2	4060-0023-0000	HANDLEBAR HANDLES (2 PCS)	
		handgrip	2
3	4370-9901-0000	LEFT HANDLE SWITCH WITH HARNESS (WITH A BUTTON FOR ELECTRIC STARTER AND SOCKET DC. 3 POSITIONS)	1
4	8980-0100-0199	KILL SWITCH	1
5	4157-0017-0000	PARKING LEVER WITH HOLDER (BRAKE LEVER)	1
6	4157-0016-0000	THREE FINGER LEVER WITH HOLDER (TROTTHLE LEVER)	1
7	4267-0003-0000	THROTTLE CABLE (2.5M) (2016)	1
8	4667-0002-0000	BRAKE CABLE (2.7M) (2016)	1

Cover

Scheme

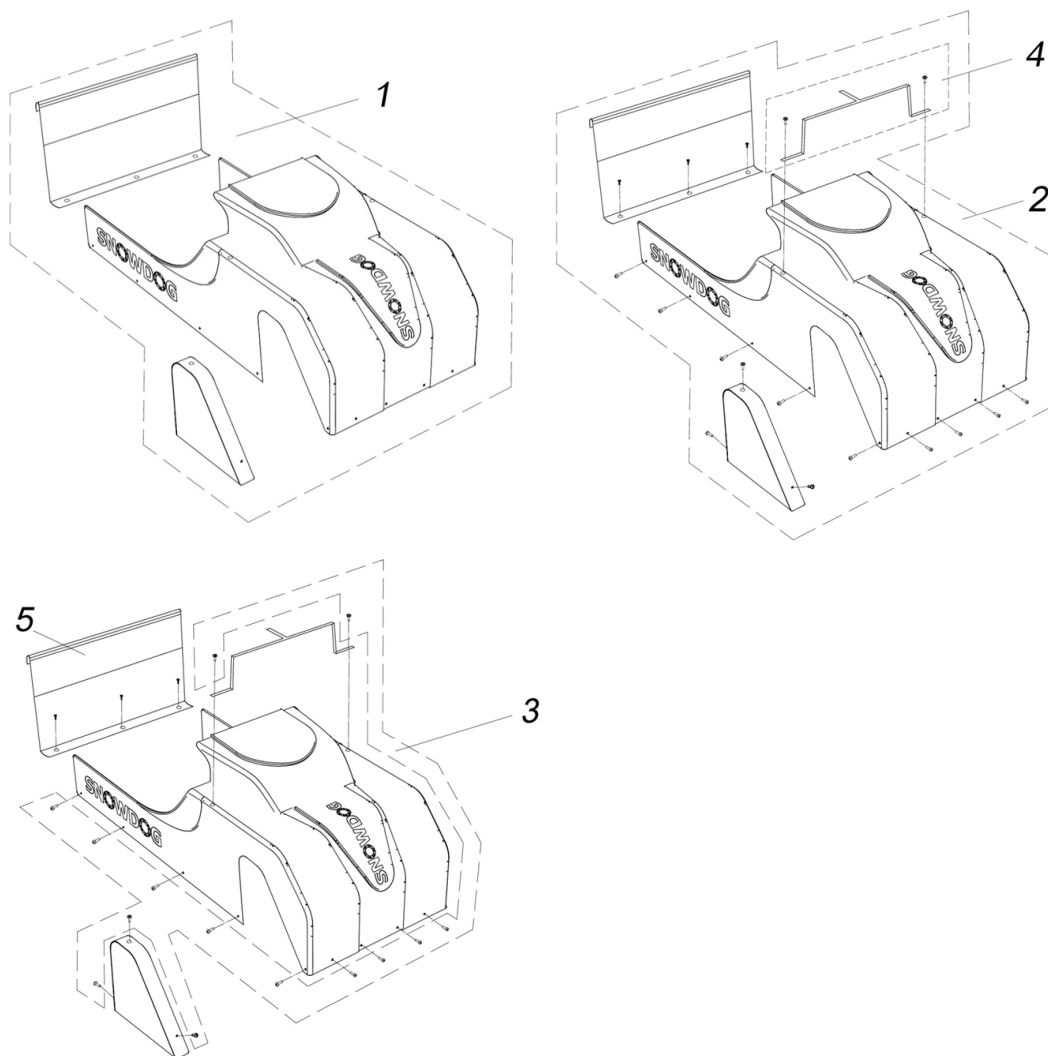

#	Part number	Description	Qty in kit
1	4974-9900-0100	SNOWDOG STANDARD WR CASE COVER GREEN CAMO	1
	4966-9900-0100	SNOWDOG STANDARD WR COVER. WHITE	1
	4967-9900-0100	SNOWDOG STANDARD WR COVER. BLACK	1
2	4060-0045-0000	SNOWDOG STANDARD WR COVER KIT. WHITE	
		cover	1
		screw M6×20	8
		screw M6×16	12
		tapping screw M4.2×19	3
		bracket	1
	4060-0046-0000	SNOWDOG STANDARD WR COVER KIT. BLACK	
		cover	1
		screw M6×20	8
		screw M6×16	12
		tapping screw M4.2×19	3
		bracket	1
3	4060-0049-0100	COVER FASTENERS KIT	
		screw M6×20	5
		screw M6×16	5
4	4970-0002-0000	COVER SUPPORT BRACKET KIT	1
		bracket	1
		screw M6×20	2
5	4187-9900-0000	ZIPPER POUCH, BLACK	1